

 



# Surface Mounted with Remote Mounted Ballast Installation Instructions

**SUPPLY CORD WARNING**

**ONLY THE MANUFACTURER OR QUALIFIED PERSON TO REPAIR**

50HZ  
230-240V AC  


 0.3m



For Indoor use only

**FIXINGS: MAX 2M APART**

**NB: Joins are not load bearing and must be adequately supported. Fixings must be within 300mm from an end or join.**

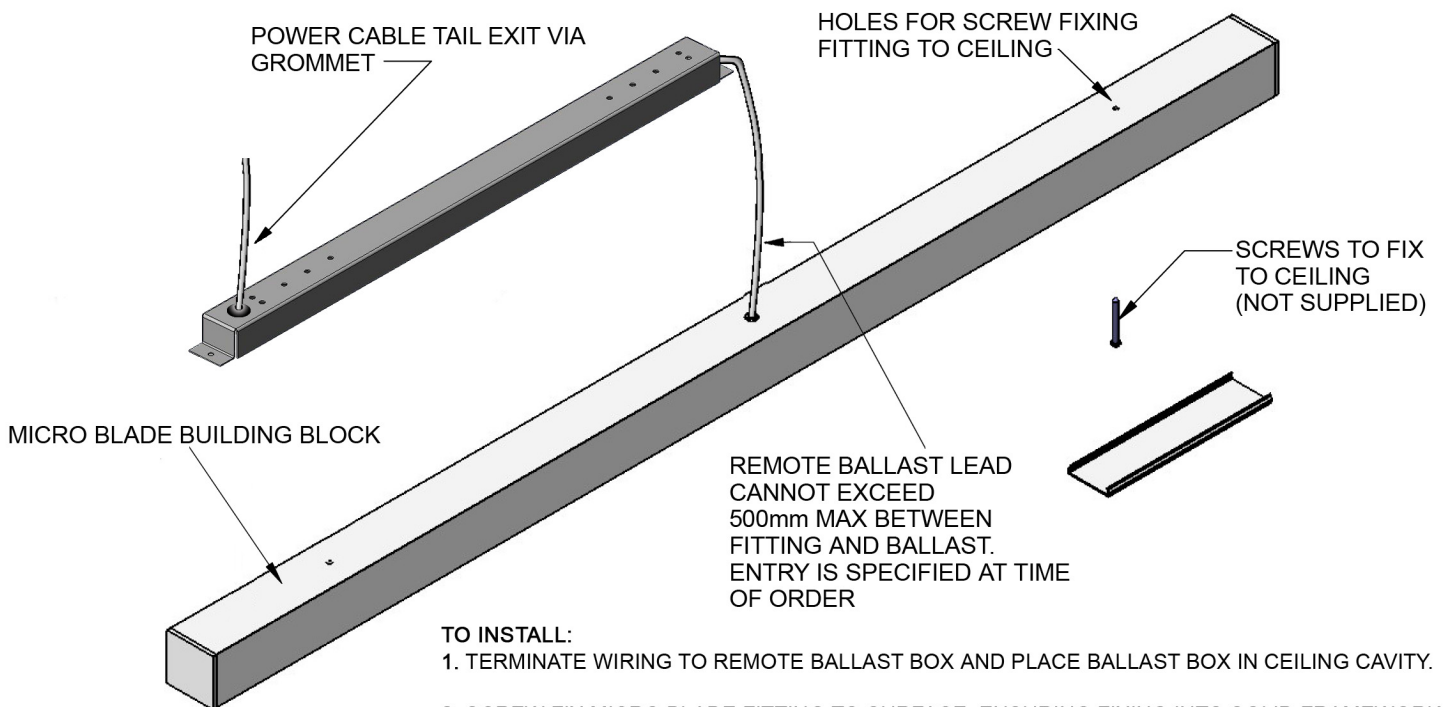

**TO INSTALL:**

1. TERMINATE WIRING TO REMOTE BALLAST BOX AND PLACE BALLAST BOX IN CEILING CAVITY.
2. SCREW FIX MICRO BLADE FITTING TO SURFACE, ENSURING FIXING INTO SOLID FRAMEWORK. FIXING HOLES CAN BE DRILLED BEHIND FLUORESCENT TUBES.  
-THIS REQUIRES THE REMOVAL OF THE DIFFUSER, T5 TUBE AND MIRROR DURING INSTALLATION. REFER TO "SLOT BLADE ENDCAPS AND ICE DIFFUSER INSTALL AND REMOVAL" INSTRUCTION.
3. SNAP IN ICE DIFFUSER AND ALUMINIUM LID SECTIONS.

**NB: THE POSITION OF THE POWER CABLE EXIT WILL VARY FOR DIFFERENT CONFIGURATIONS AND ARE SPECIFIED AT TIME OF ORDER.**

**FOR MICRO DOWNLIGHT, THE ALUMINIUM LID SECTIONS OVERLAP THE END OF THE T5 FLUORESCENT TUBES BY 15MM TO CONCEAL THE FADING LIGHT AT EACH END OF THE TUBE.**

**TO CHANGE FLUORESCENT TUBES:**

1. INSERT THE ICE DIFFUSER HOOK IN THE 2MM EXPANSION GAP BETWEEN THE DIFFUSER AND ALUMINIUM LID OR ENDCAP AND GENTLY PRY OUT THE DIFFUSER. (REFER TO "SLOT BLADE ENDCAPS AND ICE DIFFUSER INSTALL AND REMOVAL" INSTRUCTION FOR FURTHER INFO.
2. TWIST AND LIFT LAMP OUT OF LAMPHOLDERS.
3. PLACE IN NEW LAMP AND ENSURE IT IS LOCKED IN THE LAMPHOLDER BY TWISTING THE TUBE INTO PLACE.

**NB: ENSURE LINEAR FLUORESCENT LAMPS ARE BURNT IN FOR 100HRS AT FULL BRIGHTNESS.**

