


## Handle Installation Instruction

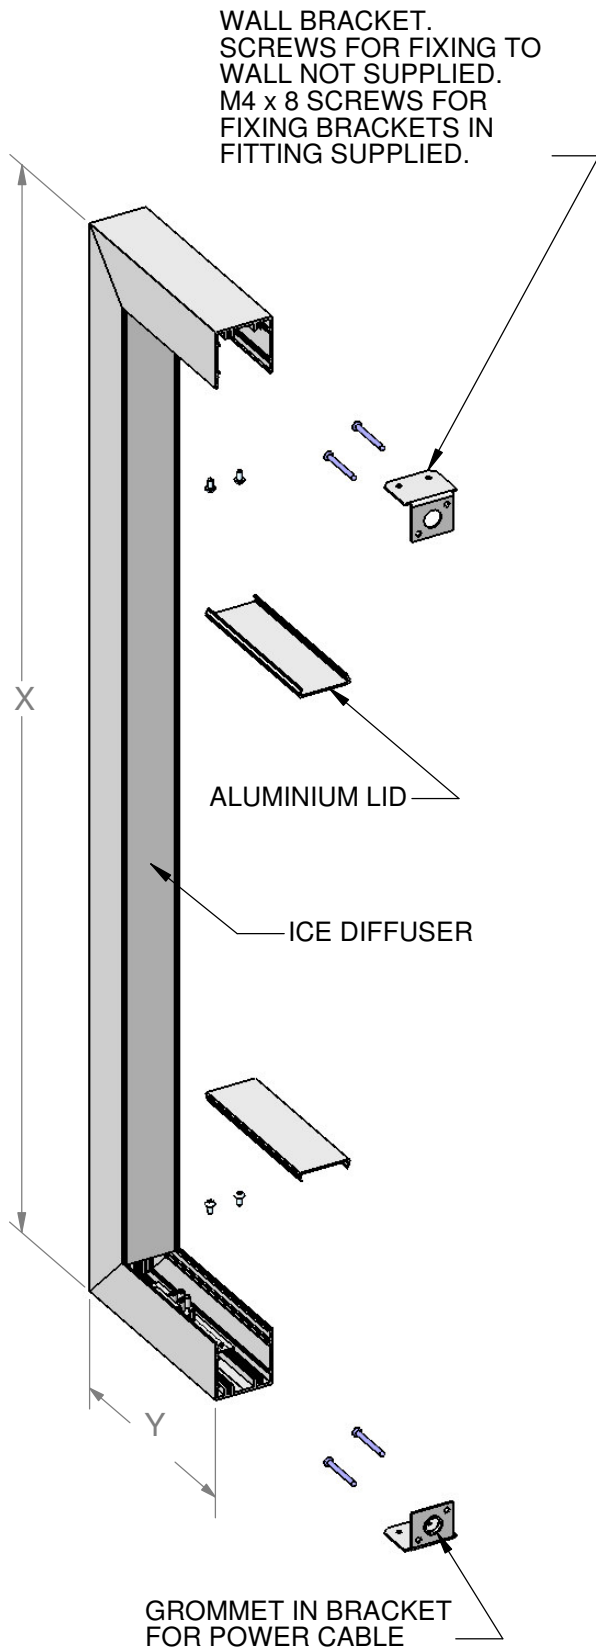

### DIMENSIONS:

T5 LAMP	X	Y	
1 x 14w	680	200	
1 x 21w	980	200	
1 x 28w	1280	350	CEILING ONLY
1 x 35w	1580	350	CEILING ONLY

MICRO EXTRUSION 52 x 52

1. CONFIRM LOCATION OF WALL BRACKETS CAREFULLY - POWER CABLE ENTERS FITTING THROUGH ONE OF THE BRACKETS.

YOU MAY WISH TO HOLD FITTING (WITH BRACKETS IN) AGAINST WALL OR CEILING AND MARK BRACKET LOCATION AND SCREW HOLES.

BRACKETS SHOULD BE SCREW FIXED TO SOLID FRAMING WITHIN WALL OR CEILING. (SCREWS NOT SUPPLIED)

2. SCREW FIX BRACKETS TO WALL OR CEILING.

3. SLIDE FITTING ONTO BRACKETS AND SCREW FIX BRACKETS TO EXTRUSION. (SCREWS SUPPLIED)

4. TERMINATE POWER CABLE OUT OF WALL OR CEILING TO FTB IN LEG OF FITTING (OTHER LEG CONTAINS THE BALLAST).

5. SNAP IN THE ALUMINIUM LIDS CAREFULLY.

6. TO CHANGE A FLUORESCENT TUBE HOOK OUT ONE OF THE ALUMINIUM LIDS AND THEN HOOK OUT THE ICE DIFFUSER CAREFULLY USING AN ICE DIFFUSER SNAP OUT HOOK TO AVOID CRACKING THE ICE DIFFUSER.

