


## Surface Mounted Installation Instruction

MICRO BLADE BUILDING BLOCK #1 WITH 1 x 24W FLUORESCENT DOWNLIGHT, SML BALLAST AND FTB IN ONE END AND BLANK EXTRUSION IN OTHER END.

POWER CABLE TAIL EXIT VIA IP RATED GROMMET. CAN EXIT FROM CENTRE OF FITTING IF REQUESTED.

HOLES FOR SCREW FIXING FITTING TO CEILING

SCREWS TO FIX TO CEILING (NOT SUPPLIED)

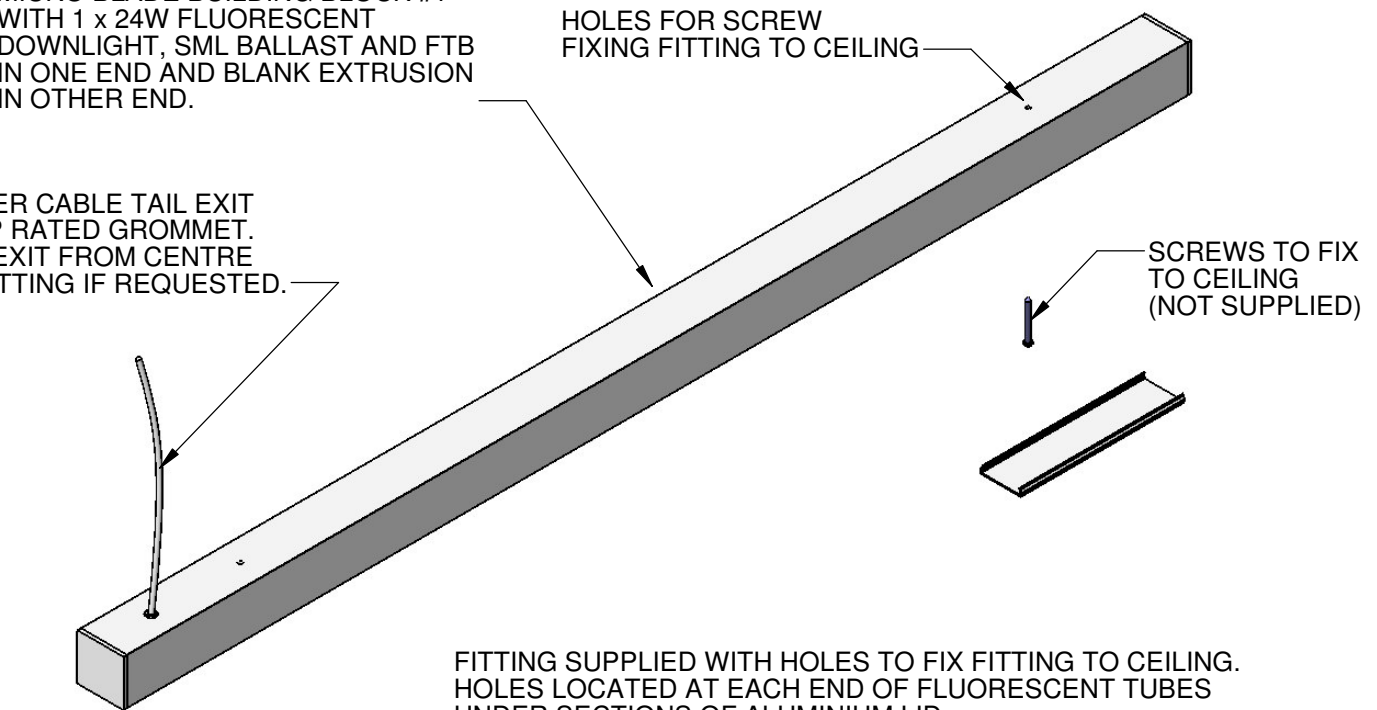

FITTING SUPPLIED WITH HOLES TO FIX FITTING TO CEILING. HOLES LOCATED AT EACH END OF FLUORESCENT TUBES UNDER SECTIONS OF ALUMINIUM LID.

ADDITIONAL FIXING HOLES CAN BE DRILLED (ON SITE OR IN FACTORY) BEHIND FLUORESCENT TUBES - THIS REQUIRES THE REMOVAL OF THE ICE DIFFUSER, FLUORESCENT TUBE AND ALUMINIUM MIRROR DURING INSTALLATION.

POSITION OF FIXING HOLES AND POWER CABLE EXIT WILL VARY FOR DIFFERENT CONFIGURATIONS AND THUS ARE DETERMINED WHEN THE FITTING IS ORDERED.

FOR MICRO DOWNLIGHTS THE ALUMINIUM LID SECTIONS OVERLAP THE END OF FLUORESCENT TUBES BY 15mm TO CONCEAL THE FADING LIGHT AT EACH END OF THE TUBE.

ALUMINIUM LID

TO INSTALL:

1. TERMINATE WIRING IN CEILING. FITTING SUPPLIED WITH POWER CABLE TAIL.
2. SCREW FIX MICRO BLADE FITTING TO SURFACE, ENSURING FIXING INTO SOLID FRAMEWORK.
3. SNAP IN ALUMINIUM LID SECTIONS.

TO CHANGE FLUORESCENT TUBES:

1. THERE IS A 2mm GAP BETWEEN ICE DIFFUSER AND ALUMINIUM LID FOR EXPANSION AND EASE OF REMOVAL.
2. USE ICE DIFFUSER SNAP OUT HOOK TO CAREFULLY SNAP OUT ICE DIFFUSER AND ALUMINIUM LIDS.

ICE DIFFUSER SNAP OUT HOOK

