


## Wall Mounted Installation Instruction

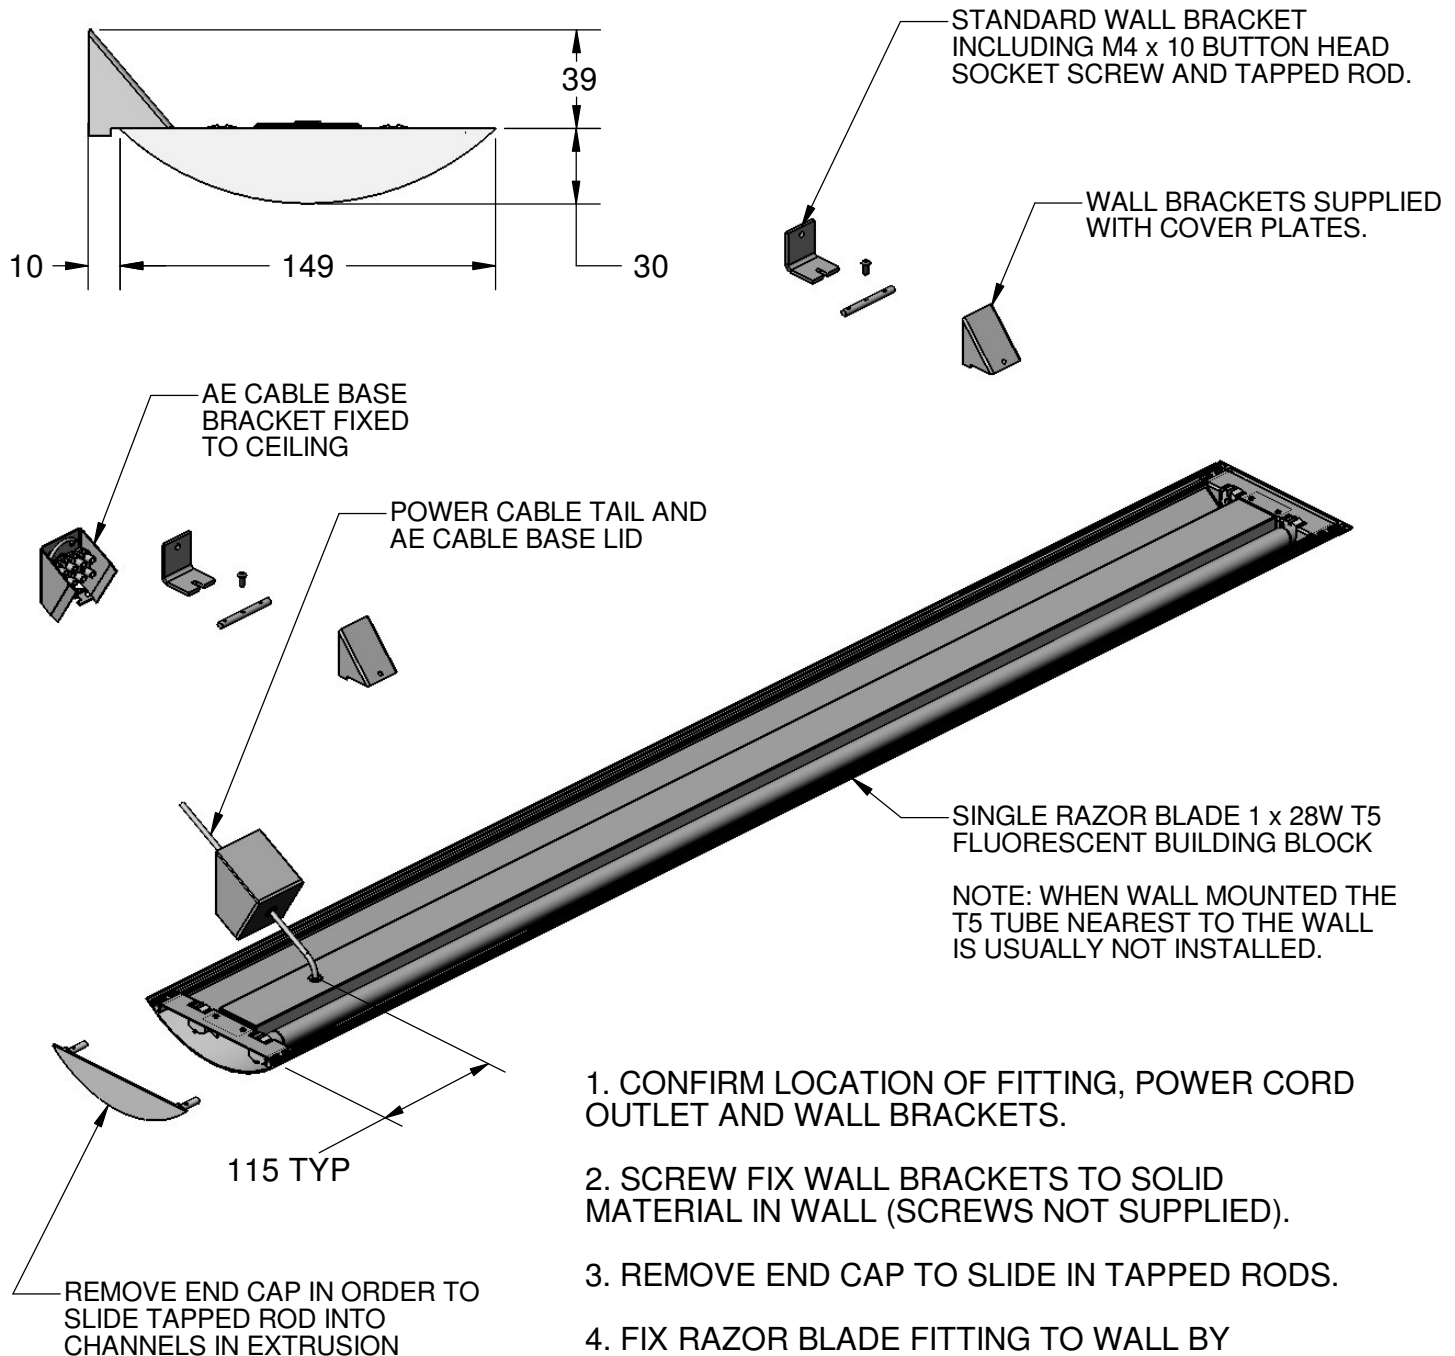

1. CONFIRM LOCATION OF FITTING, POWER CORD OUTLET AND WALL BRACKETS.
2. SCREW FIX WALL BRACKETS TO SOLID MATERIAL IN WALL (SCREWS NOT SUPPLIED).
3. REMOVE END CAP TO SLIDE IN TAPPED RODS.
4. FIX RAZOR BLADE FITTING TO WALL BY SCREWING WALL BRACKETS TO TAPPED RODS (SCREWS SUPPLIED). WALL BRACKETS CAN BE POSITIONED ANYWHERE ALONG LENGTH OF RAZOR BLADE EXTRUSION. No. OF BRACKETS WILL DEPEND ON WALL MATERIAL.
5. TERMINATE WIRING IN WALL. FITTING SUPPLIED WITH POWER CABLE TAIL.