


Sector Blade Joiner Installation Instructions



NB: Joins are not load bearing and must be adequately supported. Suspensions must be within 300mm from an end or join.

1. SLIDE JOINER SPIGOT INTO TOP CHANNEL OF EXTRUSION 1
2. FEED WIRES THROUGH GROMMET IN JOINER PLATE AND SLIDE JOINER PLATE PINS INTO EXTRUSION 1
3. CONNECT WIRES TO TERMINAL BLOCK IN EXTRUSION 2
4. SLIDE EXTRUSION 2 ON TO JOINER PLATE PINS
5. ALIGN JOINER SPIGOT SO THAT IT SPANS JOIN BETWEEN TWO EXTRUSIONS & TIGHTEN GRUB SCREWS

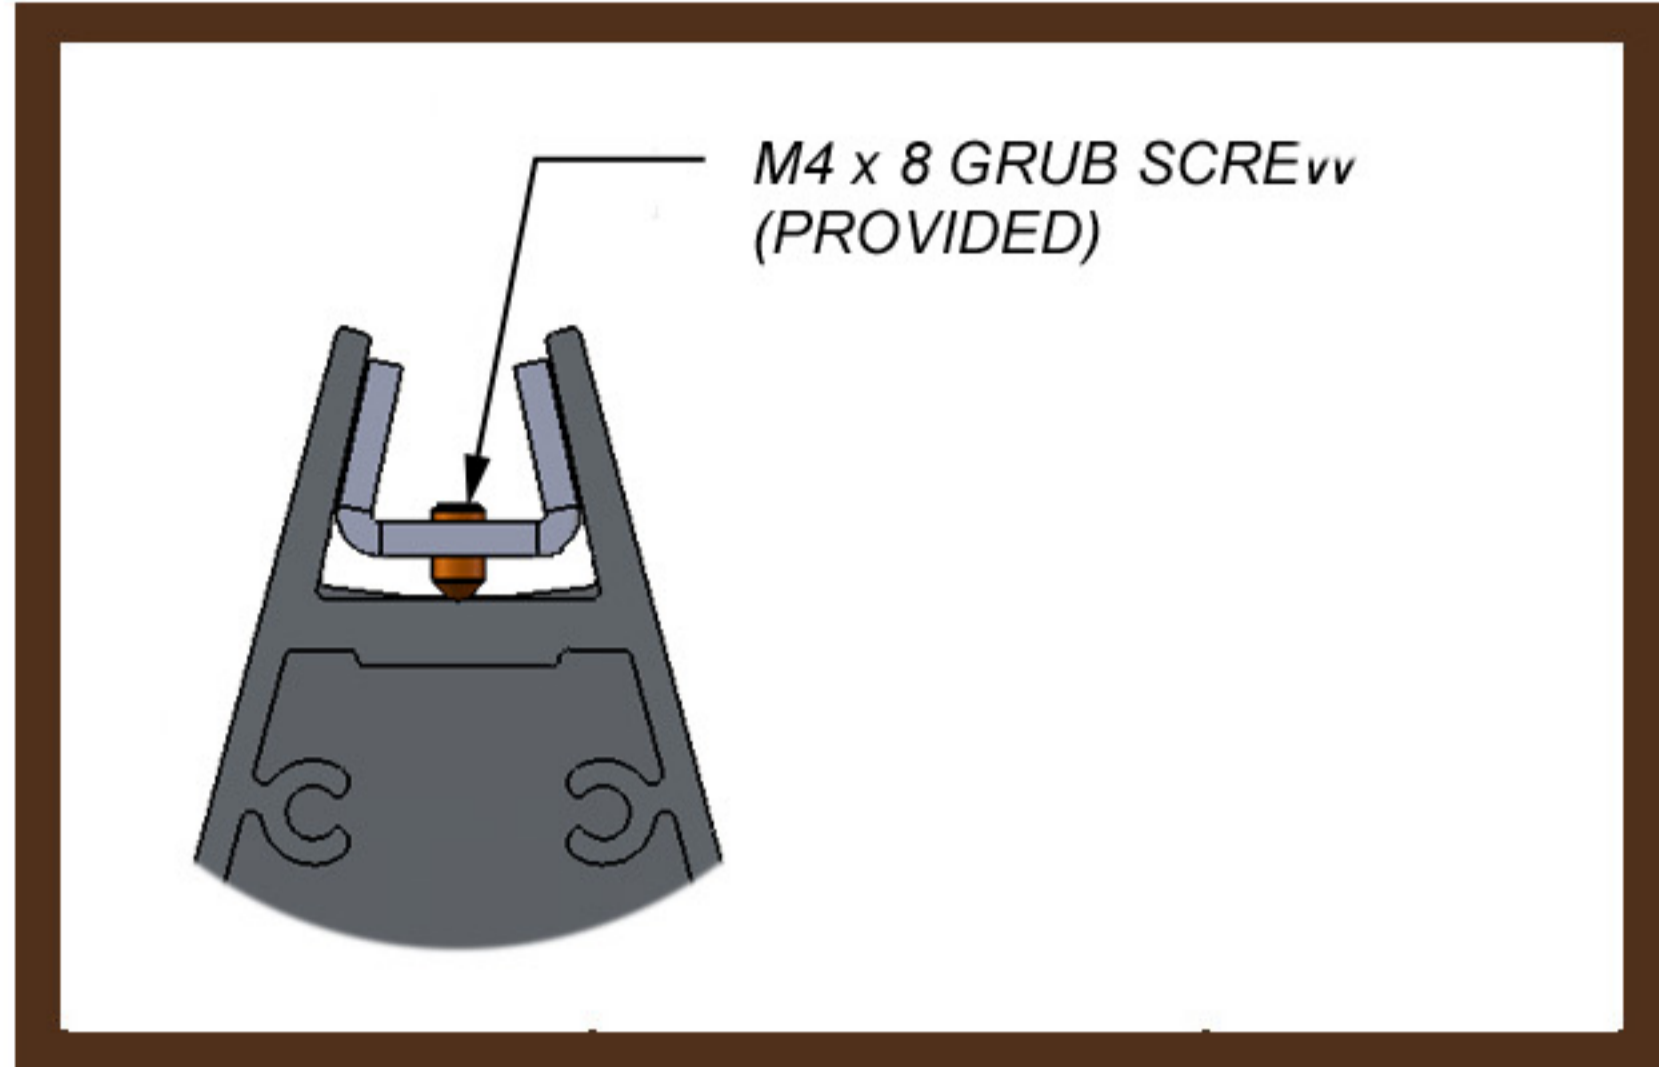